 


INSTRUCTIONS CONTROL UNIT *MINI*

Your PICHLER comfort ventilation unit comes with a **MINI remote controller**. These brief instructions focus on the most important functions of your **MINI remote controller**, a square switching unit flush-mounted in the living area.


Key assignment MINI

Operation is via **4 push-buttons**.

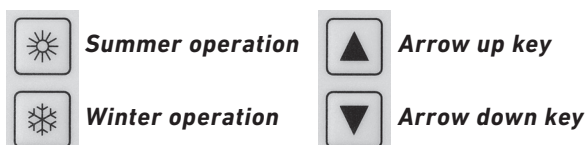


7 LEDs furthermore indicate the current status of the ventilation unit, a filter check signal and possible error signals.

- 1 Summer operation**
- 2 Winter operation**
- 3 Ventilation level 1 (absence mode)**
- 4 Ventilation level 2 (Normal ventilation)**
- 5 Ventilation level 3 (boost ventilation)**
- 6 Filter check message**
- 7 Malfunction**

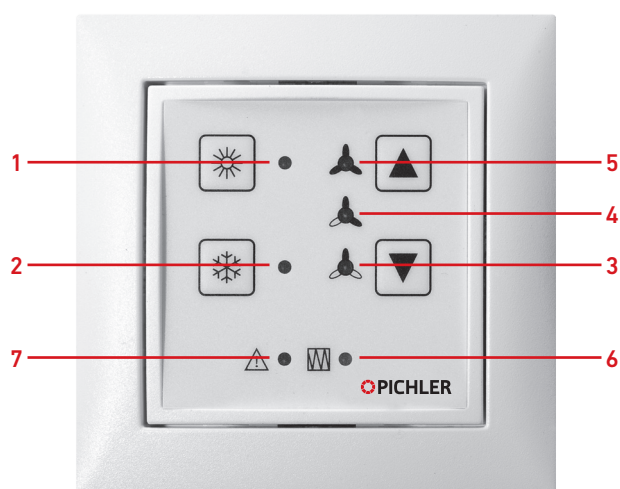

Operating the MINI

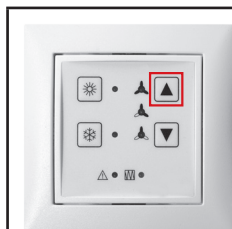


Switching on

Press the **Arrow up key** until the LED in the fan symbol turns green.



Continuous operation

Continuous operation of your comfort ventilation unit is necessary to ensure that the unit functions properly.

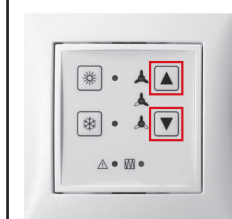


Arrow keys

Arrow keys = **for selecting ventilation levels 1 to 3**

Up arrow key = increasing the ventilation level

Down arrow key = reducing the ventilation level

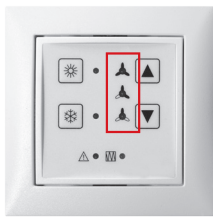


Fan symbols

Press the Arrow up key to select the **top fan symbol** – top ventilation level 3 – **boost ventilation** (automatically resets to level 2 after 2 hours).

Centre fan symbol lights up – ventilation level 2 – **normal ventilation**.

Press the Arrow down key to select ventilation level 1 – **absence mode**.

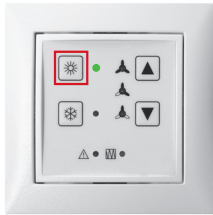

Operating mode

Use the left symbol keys to switch between **summer and winter operation**.

Summer operation + top LED is green. Actively supplies living areas with cool summer air (the integrated unit bypass is active; bypassing heat recovery).

Winter operation + bottom LED is green. Heats up fresh outdoor air via heat recovery and also using the automatic re-heating battery, if installed (the integrated unit bypass is deactivated).



Malfunction

Plant malfunction. LED next to warning triangle flashes red. Contact your installer!



Checking filters

Filter check signal every 4 months. LED is yellow. Check filter for dirt and replace if necessary.


To delete the message after cleaning/replacing the filter, simultaneously press both arrow keys for at least 5 seconds.



Premature filter exchange

Reset the filter timer without a filter message.

Simultaneously press both arrow keys for at least 5 seconds.

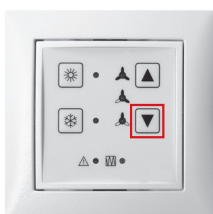

Switching off in standby mode

Switch off (= standby mode) – only when performing work generating a lot of dust.

When reaching ventilation level 1, press the **Arrow down key** again until no LED is lit.

When dust generating work is complete, press the **Arrow up key** to switch the unit on again.

NOTE: These brief instructions do NOT substitute the **Operating Manual** which is available for download on the Internet. We furthermore recommend concluding a **contract for annual servicing** by a specialised and officially licensed company.

ATTENTION: Only authorised specialist staff may perform work on the ventilation unit (except filter replacement)!